

Singapore Fire Hydrant

Pillar Hydrant Spindle Head Adapter

DESCRIPTION	PART NO
Fire Hydrant Spindle Head Adapter	WS-HYD-ADAPT



Information

Usually placed on top of the valve of a sluice valve.

Pillar Hydrant Sluice Valve

DESCRIPTION	PART NO
Fire Hydrant Sluice Valve	



Information

The underground valve of fire hydrants.

Pillar Hydrant Cap

DESCRIPTION	PART NO
Hydrant Cap	



Information

Cap for the fire hydrant